



QUALITY... PLAIN & SIMPLE®

## Lokar Flat Brake, Clutch, and Emergency Brake Pedal Pad Installation Instructions

### General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

We recommend using anti-seize lubricant on all aluminum threads.

Refer to Fig. 1 and Fig. 2 for the component names.

**Step 1:** Remove the original rubber pad if it is still installed on the pedal.

**Step 2:** For Brake or Clutch Pedal Pads, remove the four #10-32 x 1/4" button head screws from the back side of the new Lokar Pedal Pad, using a 1/8" Allen wrench. For Emergency Brake Pedal Pads, remove the three #8-32 x 3/16" button head screws from the back side of the new Lokar Pedal Pad, using a 3/32" Allen wrench.

**Step 3:** Position the new Lokar Pedal Pad onto the pedal. Reinstall the button head screws so that they catch the rear edge of the pedal.

**Fig. 3**

See Fig. 4 for a completed installation.

# Lokar Flat Brake, Clutch, and Emergency Brake Pedal Pad Installation Instructions

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

### Brake and Clutch Pedal Pads

#10-32 x 1/4"  
Button Head  
Screws

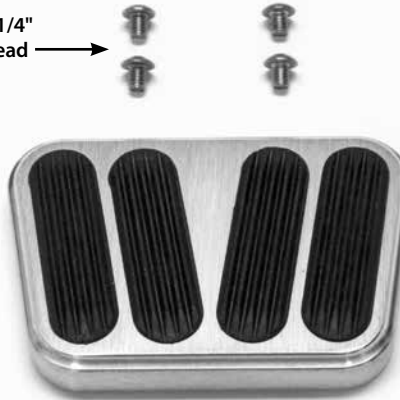


Fig. 1

### Emergency Brake Pedal Pad

#8-32 x 3/16"  
Button Head  
Screws


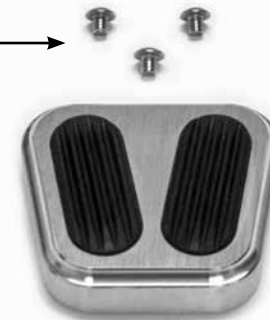


Fig. 2

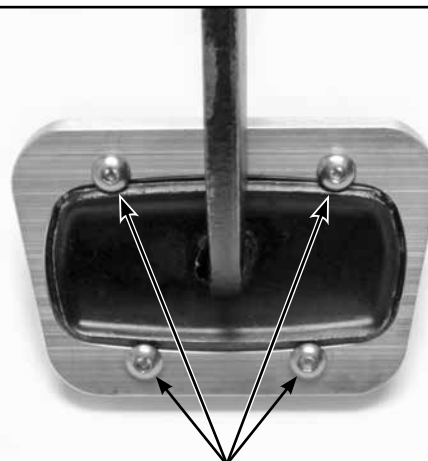

Button Head  
Screws

Fig. 3



Fig. 4